

Impulse LED

ID-01-01-LED



The Impulse dimmer can be used and programmed in one or two button mode.

Single Momentary Switch - any reference to the 'Up' switch below can be read to mean 'the switch'. When adjusting levels, the lamp does not 'bounce' up and down as it would in normal mode, this is to aid the setting of levels at the ends of the dimming range. To change dimming direction, the switch must be released and held to start dimming again in the opposite direction.

Centre Retractive Switch - The up and down switches are used to set levels but only the 'Up' switch is used to store the settings or enter/leave programming mode.

Entering Programming Mode

Important : Entering programming must be the first action that is carried out after power is applied to the dimmer and can only be activated in the first 5 minutes.

With the dimmer already powered, press and hold the 'Up' switch until the output gives 3 brief flashes (after approx. 20 seconds). Programming mode is now active and the switch can be released.

Programming

The settings that can be edited are shown in the table. Whilst in programming mode, you can edit as many settings as you like (you do not have to leave and re-enter programming mode for each setting).

Setting	No. of short presses	Adjustment range	Factory Default
Recall switching level at power up	3	On or Off	Off
Cup (Minimum) Level	6	1-99%	10% nominal
Cap (Maximum) Level	9	2-100%	100%
Switching Level	12	1-100%, 0%= Last	Last

There are two types of setting and the programming method differs for each :

'On/Off' setting type - Press the 'Up' switch the required number of times as shown in the table. The lamp will then flash briefly to indicate that the new setting has been accepted and then return to either full on or off to show the new value.

'Percentage level' setting type - Hold the switch(es) to raise/lower the lamp to the desired level and press the 'Up' switch the number of times shown in the table to store the level. The lamp will then flash briefly to indicate that the new setting has been accepted.

Note : If the setting cannot be stored because it is invalid, the output will not flash (e.g. attempting to set the Cap level below the Cup level).

Restore Factory Defaults

Whilst in programming mode, the factory defaults can be restored by repeatedly pressing the 'Up' switch until the lamp goes to full brightness and then dims slowly off (This will take approximately 25 presses). When this happens, stop pressing the switch and the output will dim slowly back to 100% and all parameters will be restored to their factory default values.

Leaving Programming Mode

To manually exit programming mode - Hold the 'Up' switch for more than 20 seconds. When programming mode is exited the output will give 3 brief flashes and the switch can then be released.

Programming mode will also exit automatically after 10 minutes of inactivity or a power cycle.