




RIGEL DOWNLIGHT INSTALLATION

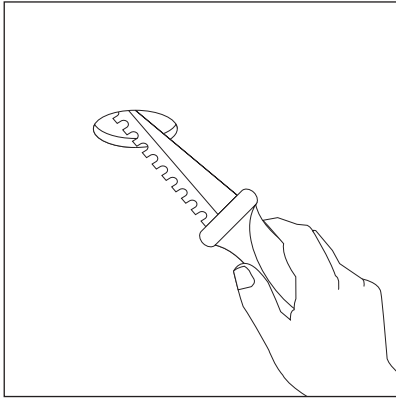


1. Cut hole for downlight

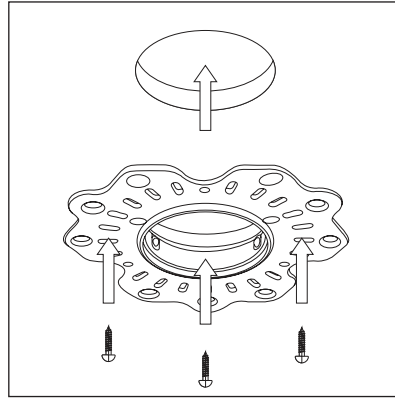


2. Glue and screw base to ceiling

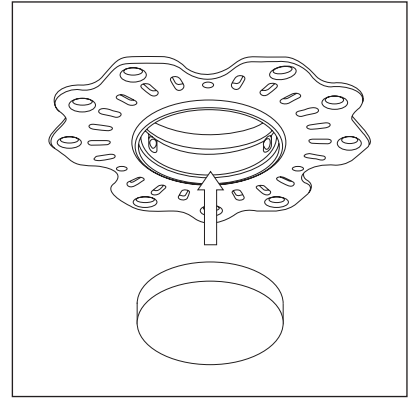


3. Insert protective foam

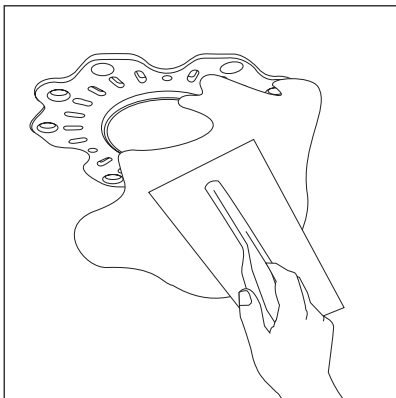


4. Plaster to base lip

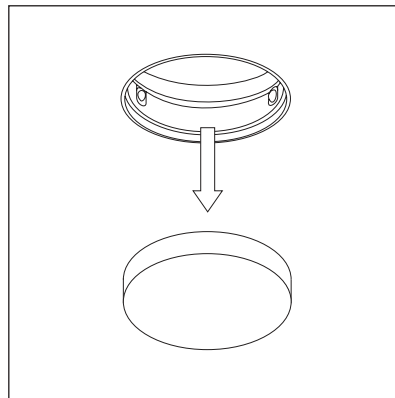

5. Remove protective foam

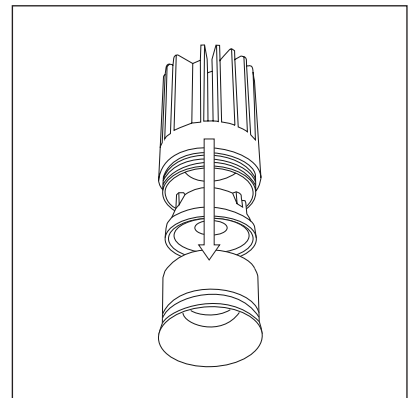


6. Assemble downlight

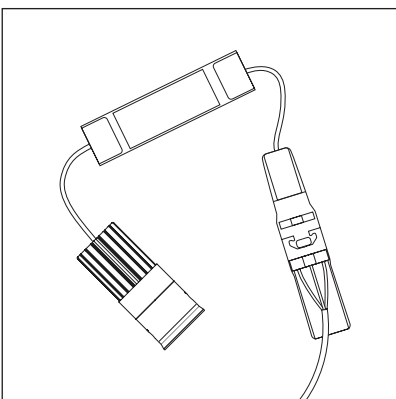


7. Connect module to LED driver. Connect driver to power using the connector

See Driver Setup section before installation.

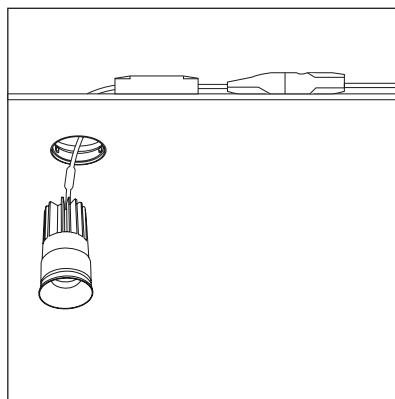

8. Fit connector and driver through hole and fit light module into frame

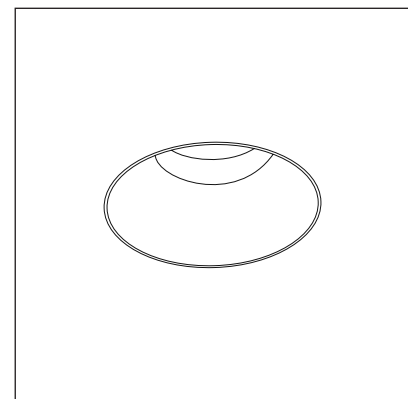


9. Downlight complete

DRIVER SET UP


Set the driver DIP switch to match the maximum mA required by the LED module, making sure the selected setting does not exceed the module's maximum rated current.



9W Module (Max. 250mA)

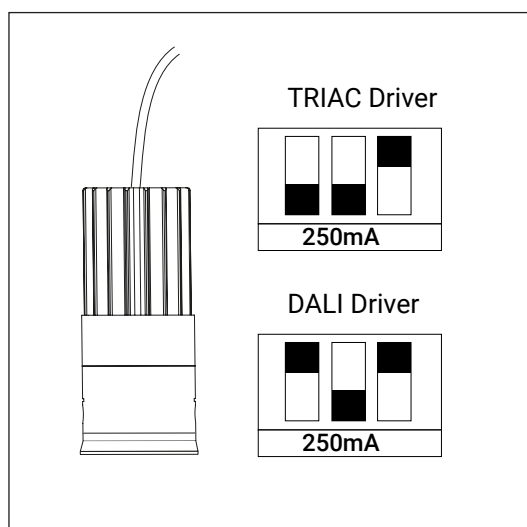

7W Module (Max. 200mA)

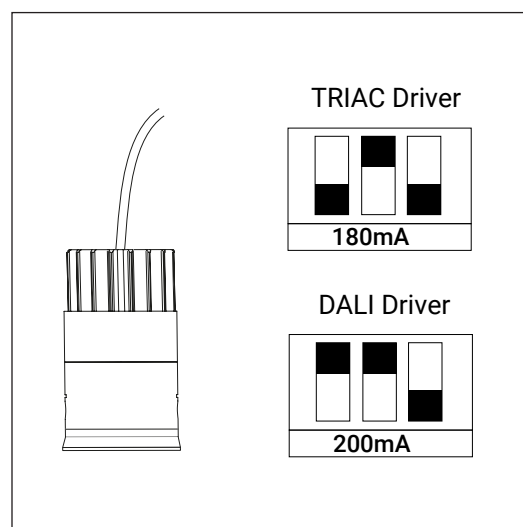


**Note: Driver settings may vary. Please check before installation.*

WALL WASHER INSTALLATION

For optimal wall washing, position the downlight approximately 50 cm from the wall. With a typical 2.5 m ceiling height, this provides smooth, even illumination across the wall with minimal hotspots or shadows.

50 cm

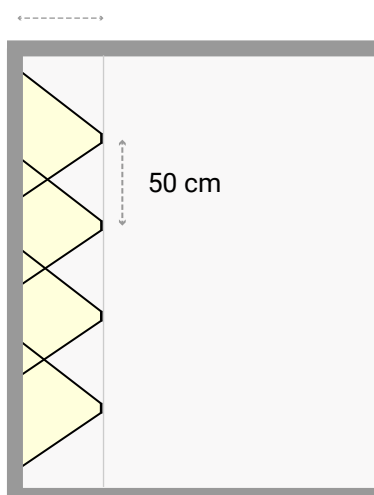

50 cm

