IR REMOTE USER INSTRUCTIONS - RGB Music Controller



Button	Function
ON	Turn on the lamp
OFF	Turn off the lamp
	1. Increase the brightness of single color 2. Increase the speed of FLASH · FADE mode 3. increase the brightness of MUSIC mode
Ö	Decrease the brightness of single color Decrease the speed of FLASH · FADE mode Decrease the brightness of single color
Color Button	Manually change all 16 colors
FLASH	Press FLASH Button (Original speed) This controller will be displayed in flash function Every Lamp will start from the RED light Press UP Button (High speed) Press DOWN Button (Low speed)
STROBE	Press FADE Button (Original speed) This controller will be displayed in A different mixed color Every Lamp will start from the White light Press UP Button (High speed) Press DOWN Button (Low speed)
	Press Button The light of this controller will jump according to the BEAT of the music (>70 dB). NO MUSIC = NO LIGHT!! Press UP Button (INCREASE the brightness in 10 STEPS) Press DOWN Button (DECEASE the brightness in 10 STEPS)
	Press Button The light of this controller will jump according to the BEAT of the music (>70 dB). WHEN NO MUSIC, the bulb will display in the FADE mode!! Press UP Button (INCREASE the brightness in 10 STEPS) Press DOWN Button (DECEASE the brightness in 10 STEPS)

NOTE:

After checking all connection very well, then power on!!