




Please ensure that you read and carry out all these instructions to ensure that your Wise TimeClock is operating correctly.

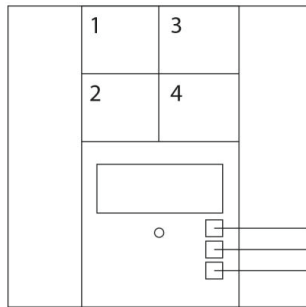

Buttons 5, 6 and 7 under battery cover

Astro Table

Zone 0 – Fixed Time
Dawn at 8.00am / Dusk at 22.00pm June – August. 20.00pm for Rest of year
Zone 1 – Scandinavia
Zone 2 – Great Britain
Zone 3 – Northern Germany, Denmark
Zone 4 – Northern France, Benelux
Zone 5 – Southern Germany
Zone 6 – Southern France
Zone 7 – Northern Italy, Switzerland, Austria
Zone 8 – Spain
Zone 9 – Southern Italy, Sicily, Sardinia, Corsica

Description

4 button timeclock switch for use with Wise Controls Receivers. Capable of sending up to 6 commands a day, controlling a maximum of 2 separate lighting circuits.*

*6 in total each day, not per circuit

LINKING YOUR RECEIVER TO YOUR WISE TIMECLOCK

(There should be an interval of approximately half a second between each button press)

WiseBox, WiseDimBox

- Press the programming button for the circuit you wish to control twice, holding on the second press. (You will hear a long continuous beep)
- While still holding, press button number 1 on your Wise TimeClock. (The sound should now change to an intermittent beep.)*
- To add a second circuit to your Wise TimeClock, repeat the previous process, pressing button number 3 instead of button number 1.

To program your Wise TimeClock as a **MASTER ON / OFF** switch, remove the boxes lid and press and hold down button MT. While still holding, press button 1 or 3 on your Wise TimeClock. Button 1 or 3 will now turn on every circuit, while button 2 or 4 will turn off every circuit.

Wise 1 Channel Switching receiver

- Using the paperclip provided, press the programming button twice, holding on the second press. (You will hear a long continuous beep)
- While still holding, press button number 1 on your Wise TimeClock. (The sound should now change to an intermittent beep.)*
- To add a second Wise 1 channel switching receiver to your Wise TimeClock, repeat the previous process, pressing button number 3, instead of button number 1.

WiseScene Receivers

- To create your timeclocks **ON** button, Press the orange programming button 3 times, holding on the third press. (You will hear a long continuous beep)
- While still holding, press button 1 on your Wise TimeClock. (The sound should now change to an intermittent beep.)*
- To create your timeclocks **OFF** button, Press the orange programming button 4 times, holding on the third press. (You will hear a long continuous beep)
- While still holding, press button 2 on your Wise TimeClock. (The sound should now change to an intermittent beep.)*
- To add a second WiseScene receiver to your Wise TimeClock, repeat the previous process, pressing buttons number 3 and 4, instead of buttons number 1 and 2.

***To confirm that the programming is successful, button 1 should switch your circuit on, while button 2 should switch your circuit off.**



ASTRO *Astro 1 should be used when controlling sun blinds and other motors.
Astro 2 should be used when controlling lighting.*

- Press and hold down button 5 until the word **MENU** appears on the LCD screen.
- The word **ASTRO** should be visible in the top left corner.
 - Press button 3 to enter Astro 1.
- Use button 1 or 2 to select ON or OFF. (on for motors / off for lighting)
 - Press button 4 to exit Astro 1.
- Press button 2 so a number 2 appears.
 - Press button 3 to enter Astro 2
- Use button 1 or 2 to select ON or OFF. (on for lighting / off for motors)
 - Press button 3 to confirm.
- Press button 4 to exit Astro sub menu. Press again to exit menu.

IMPORTANT!

Selecting the Astro function will automatically send an ON and OFF signal every day depending on the dusk and dawn times of the chosen zone. This automatically changes as the year progresses. This function will only be applied to channels 1 and 2. (CH1 will send **ON**, CH2 will send **OFF**)

AUTO FUNCTION

- Press and hold down button 5 until the word **MENU** appears on the LCD screen.
- Using buttons 1 and 2, scroll through the options until the word **AUTO** appears.
 - Press button 3 to enter AUTO sub menu.
- Use buttons 1 or 2, select Auto function to ON.
 - Press button 3 to confirm.
- Press button 4 to exit Auto sub menu. Press again to exit menu.

IMPORTANT

Auto function **MUST** be turned ON to enable the Astro, Random and Week function. If Auto function isn't activated then none of these functions will work.

DAYLIGHT SAVING FUNCTION

This function will automatically change the clock time when the clocks go back / forwards. (Strongly recommended for UK customers)

- Press and hold down button 5 until the word **MENU** appears on the LCD screen.
- Using buttons 1 and 2, scroll through the options until the ☀ appears.
 - Press button 3 to enter ☀ sub menu.
- Use buttons 1 or 2, select ☀ function to ON or OFF.
 - Press button 3 to confirm.

Press button 4 to exit ☀ sub menu. Press again to exit menu.

OTHER FUNCTIONS

Channel Function

Enabling this function to 'ON' will invert your channels. This would change button 1 and 3 to **OFF**, and 2 and 4 to **ON**

Lock Buttons

Enabling this function to 'ON' will lock buttons **1, 2, 3 and 4**.

Holiday Function

Enabling this function to 'ON' will simulate a presence at random intervals of **15 minutes** from the time set. This function is recommended if you are away from home overnight.

Reset Timer

To restore the Wise TimeClock back to factory settings, press and hold button 7 for 5 seconds. The word reset will flash on the screen to show that the reset has been successful.



SETTING THE TIME AND DATE

- Press and hold down button 5 until the word **MENU** appears on the LCD screen.
- Using buttons 1 and 2, scroll through the options until the word **TIME** appears.
 - Press button 3 to enter TIME sub menu.
- Using buttons 1 and 2, set the current **hour**.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the current **minute**.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the current **date**.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the current **month**.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the current **year**.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the current **geographical zone**.* (*see astro zone chart*)

*For customers from the United Kingdom, please select zone 2

- Press button 3 to confirm.
- Press button 4 to exit Time sub menu. Press again to exit menu.

SETTING WEEKLY PROGRAMMING FUNCTIONS

- Press and hold down button 5 until the word **MENU** appears on the LCD screen.
- Using buttons 1 and 2, scroll through the options until the word **WEEK** appears.
 - Press button 3 to enter WEEK sub menu.
- Using buttons 1 and 2, choose the day of the week you wish to assign the programming to.
 - Press button 3 to confirm.
- Using buttons 1 and 2, choose the programming command between 1 to 6.*

*start with command 1 and work upwards until all 6 commands have been used.

- Press button 3 to confirm.
- Using buttons 1 and 2, set the **hour** you wish your first command to be sent.
 - Press button 3 to confirm.
- Using buttons 1 and 2, set the **minute** you wish your first command to be sent.
 - Press button 3 to confirm.
- Using buttons 1 and 2, select the **channel*** you wish to send your command to.

*The channel is the same as your buttons, so anything assigned to channel 01 and 03 will send an **ON** signal, while anything assigned to channel 02 and 04 will send an **OFF** signal. Choosing channel **00** will not send any commands.

- Press button 3 to confirm.

Copying a command across every day of the week

- Using this function will duplicate a day's programming across all 7 days of the week.
- While still in the Week sub menu, use buttons 1 and 2 to scroll through your commands until the one you wish to copy is flashing.
- Press button 6 (all 7 days will flash twice on the screen to show copying has been successful.)

- Press button 4 to exit Week sub menu. Press again to exit menu.