

# LED Light Screen



# Totally self-contained lighting system Built-in microphone Fixed-speed or sound-activated chase

# IMPORTANT

#### Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

#### **BEFORE USE**

You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

#### OPERATION

Un-clip the two light screens and place them on a flat surface so that they cannot fall over.

Connect the two boxes together using the data lead provided.

Plug the mains lead into the mains inlet connector on the "master" screen.

Plug the mains lead into a 13 Amp mains socket. The G005FF must not be connected to the output of a dimmer.

If connecting via an extension lead, make sure that the lead is rated at 5 Amps or more, and that it is fully unwound.

Switch on at the mains socket.

If a fixed-speed chase is required, rotate the "Sound" control fully anticlockwise, then adjust the "Speed" control until the lights are changing at the required speed.

If sound-activated chase is required, rotate the "Speed" control fully anticlockwise, then adjust the "Sound" control until the light respond to sound as required. If the speed control is now rotated slightly clockwise, the lights will continue to chase at a fixed speed in the absence of sound.

### **PRODUCT SAFETY**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Place the appliance on a firm flat surface.
- Do not place on soft surfaces.
- Do not use outdoors.
- Do not use in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use in bathrooms, or in wet locations.

- Do not place the mains lead beneath a carpet or rug.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Not suitable for use in boats, caravans or similar locations.

#### PAT TESTING

When used in a commercial environment, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations. If the product is hired out, then it must be safety-tested before each hire in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.


#### **GENERAL SAFETY REQUIREMENTS**

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings).

#### MAINTENANCE

Before cleaning, turn the appliance off, and disconnect from the mains supply. The screens may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt. Do no use stronger detergents or solvents as these may damage the plastic.

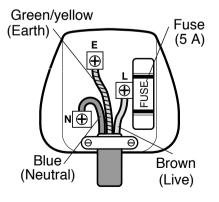

If the mains lead is damaged, it may be replaced by any mains lead with an IEC connector. If the new lead is fitted with a 13 A fuse, replace it with a 5A fuse. If the mains plug needs to be replaced, proceed as follows:

• Connect the brown wire to the terminal labelled "L".

· Connect the blue wire to the terminal labelled "N".

• Connect the green/yellow wire to the terminal labelled with the earth symbol or "E".

• Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

# DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

#### **TECHNICAL SPECIFICATION**

Dimensions:	710×121×644 mm
Weight:	7.0 kg
Power supply:	230 V ~
Power consumption:	8 W
Operating current:	0.04 A

#### SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (01744) 745000.

Electrovision Ltd., Lancots Lane, Sutton, St. Helens, Merseyside. WA9 3EX

website: www.electrovision.co.uk