


User Manual

ECLIPSE Wireless Fast Charger

Model #: GYQi-Eclipse

About Product

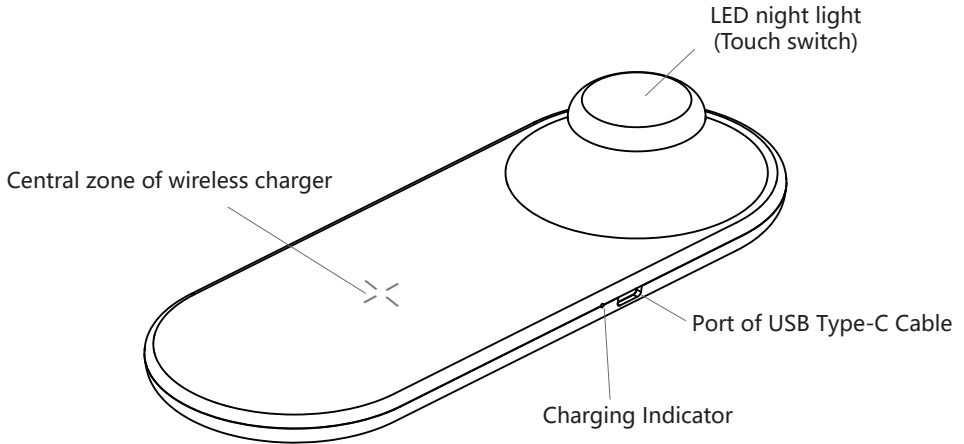

Specifications

Input: 5V---2A/9V---2A

Night Light: 2W, 2700K Warm White, Ra≥90

Working Temperature: -10~40°C

Using

- ① Connect the USB power cable. The indicator will be turned red for standby.
- ② Put the wireless device onto the central zone of charger board. The indicator will be turned green when charging. (Adjust the location of device when charging informal.)
- ③ Touch once for switching on or off the night light. Put the finger on night light for adjusting the brightness.

For Your Safety

- ① Only use 5V output adaptor. Recommend at least 10 watts power adaptor.
- ② Do not turn the night light head.
- ③ Do not see the LED diode directly.
- ④ Do not throw the product to fire or water.
- ⑤ Keep the distance as least 20cm between the product and related medical devices.
- ⑥ Keep the distance of magnetic cards.

Package Contents

ECLIPSE Wireless Fast Charger x 1 ; 1m USB Type-C Cable x 1 ; User manual x 1.